



# FUSION

Waterproof Luxury Vinyl Flooring


## Molding Specification

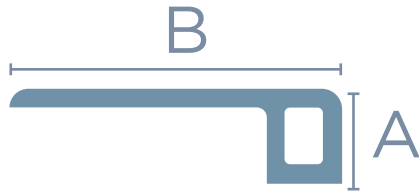


Baby Threshold 94"		
Flooring Thickness	A"	B"
WPC		
7.5 mm	0.33	1.4
8.0 mm - Scenic	0.37	1.73
8.0 mm - Enhanced	0.41	1.4
SPC		
4.4 mm	0.39	1.73
5.0 mm - High-Octane	0.49	1.73

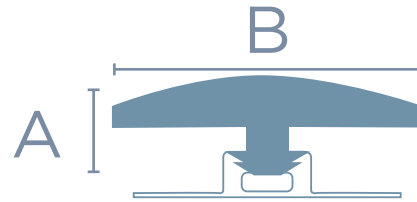


T-Molding 94"		
Flooring Thickness	A"	B"
WPC		
7.5 mm	0.53	1.26
8.0 mm - Scenic	0.28	1.71
8.0 mm - Enhanced	0.57	1.26
SPC		
4.4 mm	0.39	1.71
5.0 mm - High-Octane	0.39	1.71

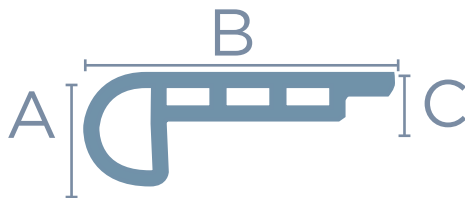

Flush Stair Nose 94"			
Flooring Thickness	A"	B"	C"
WPC			
7.5 mm	0.75	2.07	0.30
8.0 mm - Scenic	1.58	4.49	0.17
8.0 mm - Enhanced	1.60	2.07	0.31
SPC			
4.4 mm	0.75	2.07	0.20
5.0 mm - High-Octane	1.58	4.49	0.29

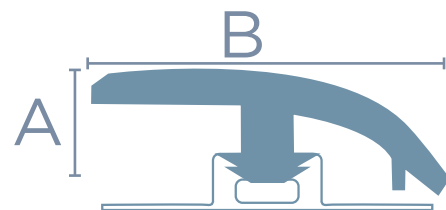

Reducer 94"		
Flooring Thickness	A"	B"
WPC		
7.5 mm	0.53	1.42
8.0 mm - Scenic	0.30	1.77
8.0 mm - Enhanced	0.55	1.26
SPC		
4.4 mm	0.39	1.73
5.0 mm - High-Octane	0.39	1.77

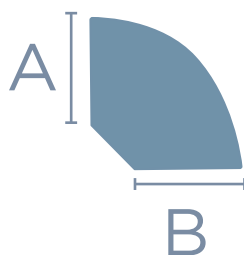

Quarter Round 94"		
Flooring Thickness	A"	B"
WPC		
5.0 mm	0.71	0.71
7.5 mm	0.71	0.71
8.0 mm	0.71	0.71

# FUSION

Waterproof Luxury Vinyl Flooring

## Molding Installation Instructions

**Quarter Round** - this creates the finishing touches between the floor and baseboards.

Measure & trim to fit.  
Affix molding using adhesive, screws or nails.  
Follow adhesive manufacturer's instructions completely.

**T-Molding** - AT-shaped transition piece that covers the narrow gap in a doorway between two adjacent floors that are on the same level.

Measure & trim to fit.  
Affix molding using adhesive, screws or nails.  
Insert molding into track. Tap down with rubber mallet.

**Baby Threshold** - this is used to transition from hard surface floors to floors of a different height level.

Measure & trim to fit.  
Affix molding using adhesive, screws or nails.  
Follow adhesive manufacturer's instructions completely.

**Overlap Reducer** - this is used to transition from a higher-profile floor to a lower-profile floor.

Measure & trim to fit.  
Affix molding using adhesive, screws or nails.  
Insert molding into track. Tap down with rubber mallet.

**Flush Stair Nose** - this is used when installing Fusion on stairs, providing the finishing touch to the outside stair edge.

Measure & trim to fit.  
Affix molding to stair edge using adhesive.  
Follow adhesive manufacturer's instructions completely.